 



Remote Control

The remote control requires two (2) “AAA” size batteries (supplied), make sure batteries are installed properly before use. You can access all the features of AVerVision PL50 with the remote.

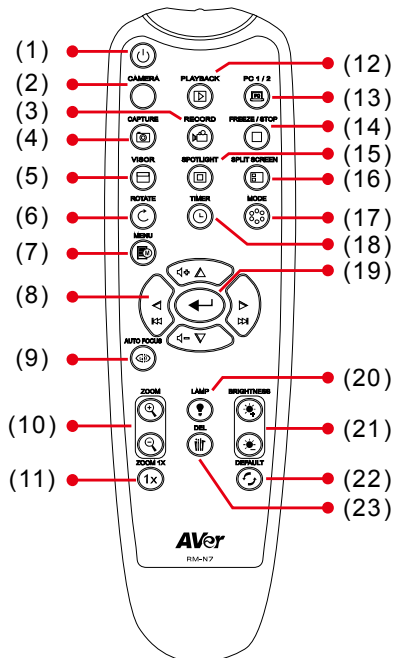


(fig. 1.4)

Name	Function
(1) POWER	Turn the unit on/standby.
(2) CAMERA	Camera mode displays the video signal from the built-in camera.
(3) RECORD	Start/Stop audio & video recording. Video recording can only be saved either in a SD memory card or a USB flash drive.
(4) CAPTURE	Capture still image in Camera mode. In continuous capture mode, press this button again to stop.
(5) VISOR	Call the Visor submenu. Visor covers part of the presentation screen and allow presenter to reveal the material as desire. In the Visor submenu, the following options are available. <div data-bbox="906 940 1203 1167" data-label="Image"> </div> <p>ON/OFF – select to run/cancel the Visor.</p> <p>Press to move to the next selection.</p> <p>Shade – set the opacity level of the covered area. The shaded area will completely turns black when it is set to level 100. Press to move to the next selection.</p> <p>OK – press for the setting to take effect. If you select ON, upper part of the presentation screen is slightly exposed. Use the ▲, ▼, ◀, & ▶ buttons to reveal more of the covered area; and OFF will close the submenu.</p> <p>To turn off Visor, press again.</p>
(6) ROTATE	Rotate the image by 90° in Camera mode and Playback mode.
(7) MENU	Open and exit the OSD menu.

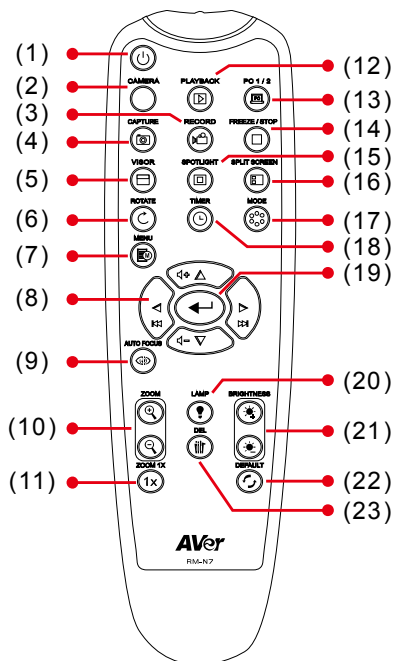 

(fig. 1.4)

Name	Function
(8) ▲, ▼, ◀, & ▶	- Pan and zoom-in image (above digital zoom level) in both live and playback mode. - Select options in OSD menu. - Use ▲&▼ to increase and decrease the video playback volume. - Use ◀&▶ to play the video backward and forward. Move the Spotlight frame and Visor screen cover.
(9) AUTO FOCUS	Adjust the focus automatically.
(10) ZOOM +/-	- Increase/decrease the image magnification in camera and picture playback mode.
(11) ZOOM RESET	Reset zoom level to 100%.
(12) PLAYBACK	View the captured picture/video from the memory in 16-thumbnail images.
(13) PC 1/2	PC mode displays the video signal from the RGB INPUT port of AVerVision PL50.
(14) FREEZE / STOP	- Freeze live images. - Stop video playback.
(15) SPOTLIGHT	Call the Spotlight submenu. Spotlight overlays a box frame on the presentation screen. You can adjust the box size and move it around. In the Spotlight submenu, the following options are available.

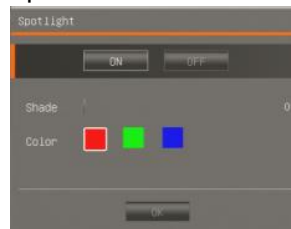 

ON/OFF – select to run/cancel the

 
Spotlight. Press to move to the next selection.

Shade – set the opacity level of the area outside the box. The shaded area will completely turns black when it is set to


 


level 100. Press to move to the next selection.

Color – select the Spotlight frame color.

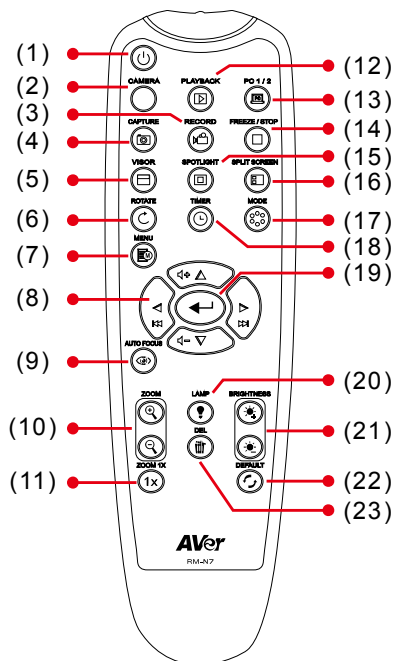Press to move to the next selection.



(fig. 1.4)

Name	Function
(15) SPOTLIGHT	<p>OK – press  for the setting to take effect. If you select ON, the frame will appear and blink, use the ▲, ▼, ◀, & ▶ buttons to adjust the frame size and press  to set the desired size; and OFF will close the submenu.</p> <p>To turn off Spotlight, press  again.</p>
(16) SPLIT SCREEN	<p>Divide the screen into two. One side displays the live image from the built-in camera and the other side displays 8-thumbnail size picture/video from the memory.</p>
(17) MODE	<p>Select from 6 type of modes:</p> <p>Sharp - adjust the contrast along the edges making text appear more visible. Viewing the subject from 32-36 cm (16X zoom) away from the camera.</p> <p>Graphics - adjust the gradient of image. Viewing the subject from 32-36 cm (16X zoom) away from the camera.</p> <p>Motion - increase frame rate. Sufficient lighting is required when using this mode. Viewing the subject from 32-36 cm (16X zoom) away from the camera.</p> <p>Microscope - automatically adjust optical zoom for microscopic viewing.</p> <p>Macro - set to view when object is only 10-32cm (5X zoom) away from the camera.</p> <p>Infinite - set to view when subject is from 36 cm to infinity (Max.16X) and further away from the camera.</p>
(18) TIMER	<p>Call the Timer submenu. Select to Start/Pause/Stop the timer countdown and set the timer duration.</p>
(19) 	<ul style="list-style-type: none"> - Make a selection in Playback mode and OSD menu. - Play/Pause video playback.
(20) LAMP	<p>Turn the overhead light on/off.</p>
(21) BRIGHTNESS +/-	<p>Adjust the brightness.</p>
(22) DEFAULT	<p>Reset to factory default setting.</p>
(23) DEL	<p>Delete the selected picture/video in Playback mode.</p>