


5

Control the TT-02RX from anywhere in the classroom

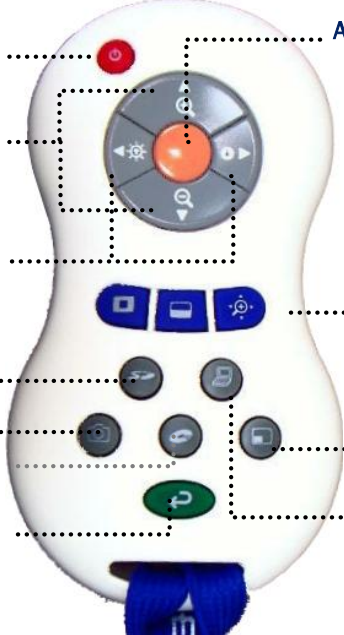

Power

Zoom

Adjust brightness

View images/videos from SD card

Take a picture and save to SD card
Future accessory

Return to live image

Auto-focus: Press after zooming


The **Highlight** allows you to emphasize a specific area of the image. Move the highlight using arrow buttons [▲][▶][▼][◀].

The **Mask** feature lets you to hide the answer to a written problem or following along when reading text, etc. To move the mask, use [▲][▶][▼][◀].

Press the **Scroll** to zoom instantly then use [▲][▶][▼][◀] to scroll around your image.

Picture-in-Picture Compare the live image to the paused image.

View **computer desktop**



6

Additional Menu features

Press  to see all features



Scroll
Preset the scroll to 2X, 3X, or 4X zoom. You can quickly zoom and scroll around the image by pressing Scroll on the remote.

Slide Show Settings



Press [SD card] then [Menu]
Start a slideshow of the images from your SD card. Choose the interval time, order, and which images to play, etc.

Microscope




Connect your microscope using the provided adaptor and set to Microscope mode to view slides. Zoom, capture images and record video.

7

Install Image Mate software

Connect the TT-02RX to a computer and install Image Mate to **save images and videos to the computer**. You can also **annotate on the live image and record time-lapse photography** (set interval time in Settings before beginning time-lapse)

Download Image Mate at
<http://www.elmoussa.com/support/101>

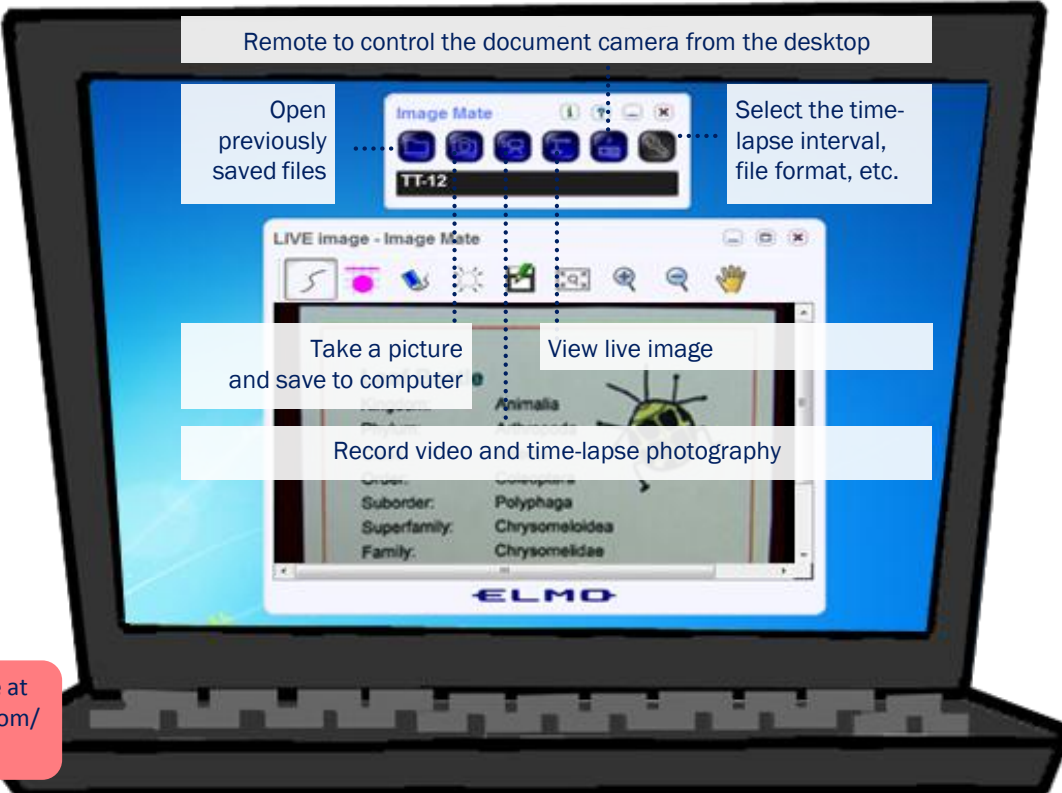

Remote to control the document camera from the desktop

Open previously saved files

Select the time-lapse interval, file format, etc.

Take a picture and save to computer

View live image

Record video and time-lapse photography

Image Mate
TT-12

LIVE Image - Image Mate

Suborder: Polyphaga
Superfamily: Chrysomeloidea
Family: Chrysomelidae

ELMO